

**EMAIL US**

[www.scion.com/contact/contact\\_main.html](http://www.scion.com/contact/contact_main.html)

**CHAT**

On weekdays you can chat with a Scion Customer Advocate.

[www.scion.com/contact/contact\\_main.html](http://www.scion.com/contact/contact_main.html)

**CALL US**

For the Scion Customer Experience dial 1.888.70.SCION.

**2007****MAILING ADDRESS**

Scion  
19001 S. Western Ave.  
D102, P.O. Box 2742  
Torrance, CA 90509-2742  
USA

**OUR WEBSITE**

[www.scion.com](http://www.scion.com)



©2006 Toyota Motor Sales, U.S.A., Inc.  
00452-PRG07-TC

**Scion tC**  
**Pocket Reference Guide**

# 2007 SCION tC

This *Pocket Reference Guide* is a summary of basic vehicle operations. It contains brief descriptions of fundamental operations so you can locate and use the vehicle's main equipment quickly and easily.

The *Pocket Reference Guide* is not intended as a substitute for the *Owner's Manual* located in the vehicle's glove box. We strongly encourage you to review the *Owner's Manual* and supplementary manuals so you will have a better understanding of the vehicle's capabilities and limitations.

Your dealership and the entire staff of Scion, a marque of Toyota Motor Sales, U.S.A., Inc., wish you many years of satisfied driving in your new SCION tC.

## **! A word about safe vehicle operations**

This *Pocket Reference Guide* is not a full description of SCION tC operations. Every tC owner should review the *Owner's Manual* that accompanies this vehicle.

Pay special attention to the boxed information highlighted in yellow throughout the *Owner's Manual*. Each box contains safe operating instructions to help you avoid injury or equipment malfunction.

All information in this *Pocket Reference Guide* is current at the time of printing. Toyota reserves the right to make changes at any time without notice.

# INDEX

Item	Page no.
<b>OVERVIEW</b>	
Engine maintenance	7
Fuel tank door opener and cap	6
Hood release	7
Indicator symbols	4-5
Instrument cluster	4
Instrument panel	2-3
Keyless entry	6
<b>FEATURES/OPERATIONS</b>	
Air Conditioning/Heating	14
Automatic transmission	8
AUX audio jack	15
Clock	14
Cruise control	10
Cup holders	14
Door locks	8
Light control-Instrument panel	13
Lights & turn signals	11
Panorama moonroof	12
Parking brake	8
Power outlet	13
Seat adjustments-Front	9
Seat adjustments-Rear	9
Seats-Head restraints	9
Steering wheel switches	15
Tilt steering wheel	10
Windows	13
Windshield wiper & washer	12
<b>SAFETY AND EMERGENCY FEATURES</b>	
Seat belts	16
Spare tire & tools	17
Tire Pressure Warning System reset	16


OVERVIEW

FEATURES/OPERATIONS

SAFETY AND EMERGENCY FEATURES

# OVERVIEW

## Instrument panel

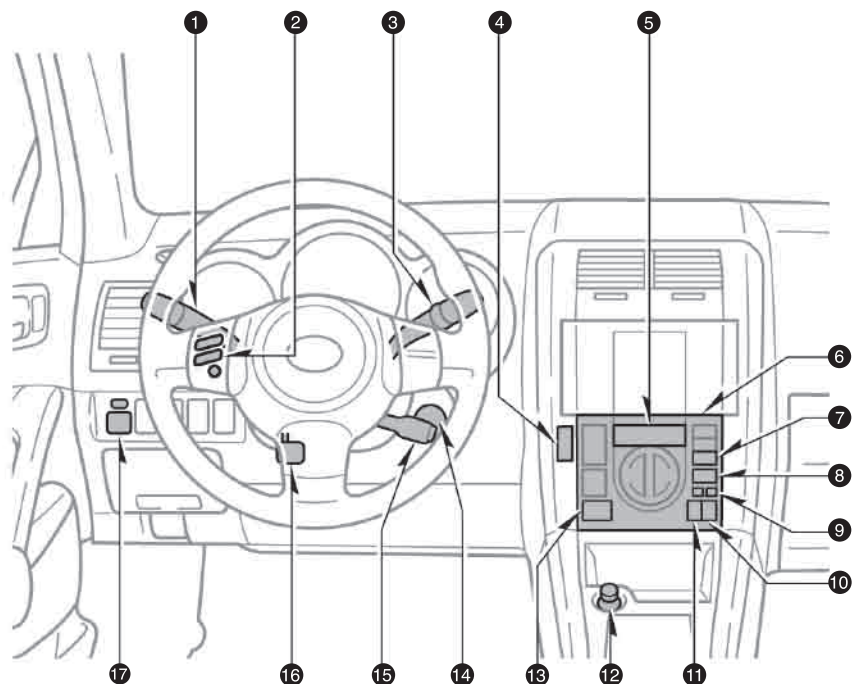


- ➊ Headlight and turn signal controls
- ➋ Steering wheel switches
- ➌ Wiper and washer controls
- ➍ Emergency flasher switch
- ➎ Clock, Air Conditioning and outside temperature display
- ➏ Air Conditioning controls
- ➐ Rear window defogger switch
- ➑ Outside temperature display button

- ➒ Clock adjustment buttons
- ➓ Front passenger seat belt reminder light
- ➔ Front passenger occupant classification indicator light
- ➕ Cigarette lighter
- ➖ Engine immobilizer system indicator light
- ➗ Ignition
- ➘ Cruise control
- ➙ Tilt steering lock release
- ➚ Power rear view mirror controls

## OVERVIEW

### Instrument cluster

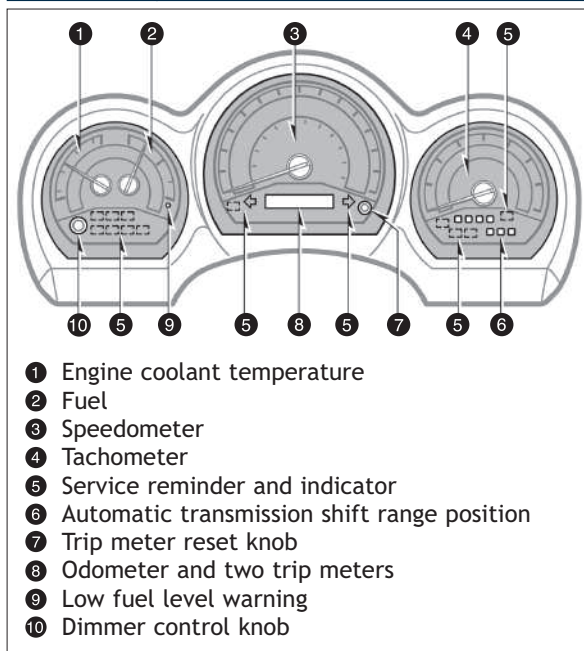

### Indicator symbols

<b>BRAKE</b>	Brake system warning <sup>1</sup>
	Driver seat belt reminder <sup>1</sup>
<b>PASSENGER</b> 	Front passenger seat belt reminder <sup>1</sup>
	Battery warning <sup>1</sup>
	Malfunction/Check Engine indicator <sup>1</sup>
	Low engine oil pressure warning <sup>1</sup>
	Open door warning <sup>1</sup>
	Airbag SRS warning <sup>1</sup>
	Low Tire Pressure Warning <sup>1</sup>

<b>MAINT REQD</b>	Engine oil replacement reminder <sup>1</sup>
	Turn signal indicators
	Headlight high beam indicator
<b>CRUISE</b>	Cruise control indicator <sup>2</sup>
<b>P R N D</b> <b>3 2 L</b>	Automatic transmission indicator
<b>ABS</b>	Anti-lock Brake System warning <sup>1</sup>

### CAUTION


When the Anti-lock Brake System (ABS) function is in action, you may feel the brake pedal pulsating and hear a noise. In this situation, to let the Anti-lock Brake System work for you, just hold the brake pedal down more firmly. Do not pump the brake as this will result in reduced braking performance.


<sup>1</sup> For details, refer to "Service reminder indicators and warning buzzers," Section 1-6, 2007 Owner's Manual.

<sup>2</sup> If this light flashes, refer to "Cruise control," Section 1-7, 2007 Owner's Manual.

## OVERVIEW

### Fuel tank door opener and cap

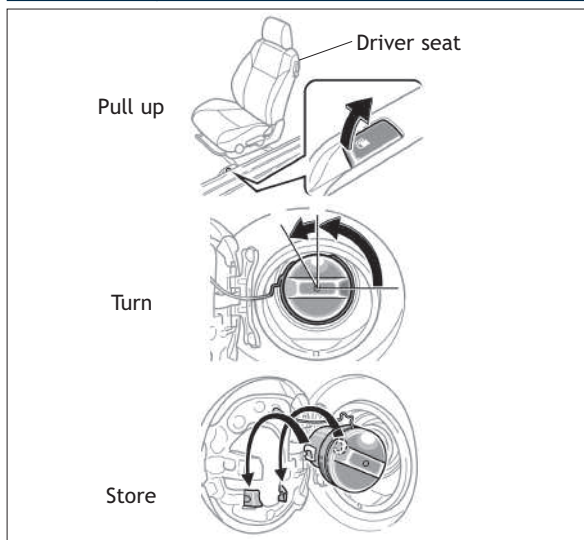


**NOTE:** Tighten cap until one click is heard. If the cap is not tightened enough, Check Engine “” indicator may illuminate.

### Keyless entry

#### Locking operation

Push

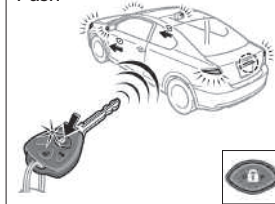

#### Unlocking operation

Push ONCE: Driver door  
TWICE: All doors




**NOTE:** After unlocking, if a door is not opened within thirty (30) seconds, all doors will relock for safety.

#### Alarm operation


Push and hold



### Hood release

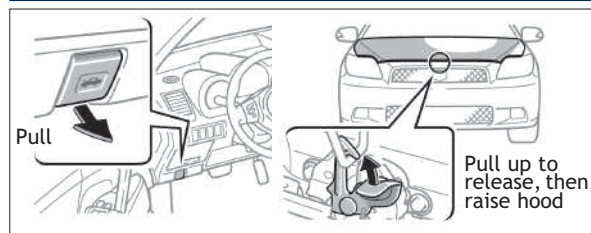

### Engine maintenance

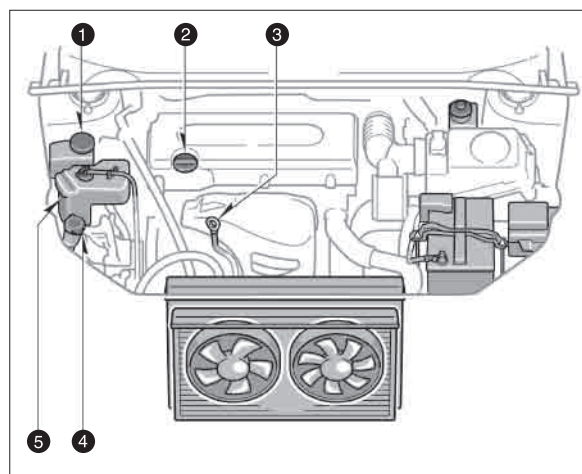

- 1 Power steering fluid reservoir
- 2 Engine oil filler cap
- 3 Engine oil level dipstick
- 4 Windshield washer fluid tank
- 5 Engine coolant reservoir


**Note:** Regularly scheduled maintenance, including oil changes, will help extend the life of your vehicle and maintain performance. Please refer to the “Owner’s Warranty Information Booklet,” “Scheduled Maintenance Guide” or “Owner’s Manual Supplement.”



# FEATURES/OPERATIONS

## Automatic transmission (if equipped)


- |          |                   |
|----------|-------------------|
| <b>P</b> | Park <sup>1</sup> |
| <b>R</b> | Reverse           |
| <b>N</b> | Neutral           |
| <b>D</b> | Drive             |
| <b>3</b> | Third gear        |
| <b>2</b> | Second gear       |
| <b>L</b> | First gear        |

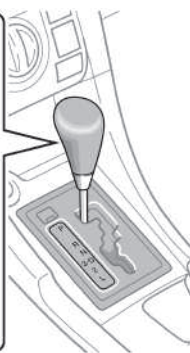


<sup>1</sup>The ignition switch must be ON, and the brake pedal depressed to shift from "Park."

Downshifting increases power going uphill, or provides engine braking downhill. For best fuel economy during normal driving conditions, always drive with the shift lever in the "D" position.

## Parking brake

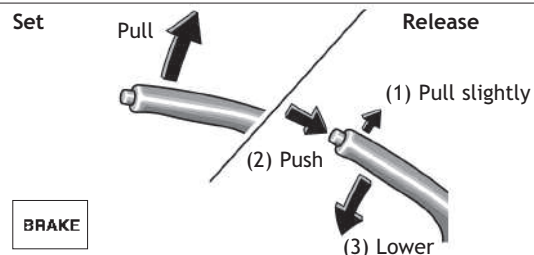

## Door locks

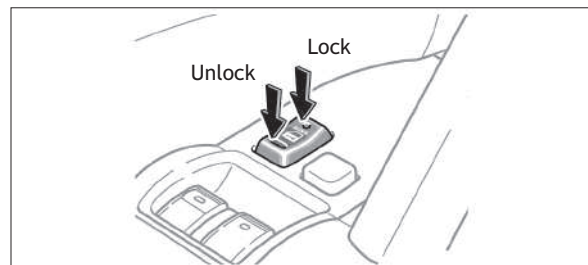


## Seat adjustments-Front



- 1 Position
- 2 Cushion angle (if equipped)
- 3 Height crank (driver side only)
- 4 Seatback angle
- 5 Seatback lock release (if equipped)


## Seat adjustments-Rear

Seatback/Angle adjusting lever\*

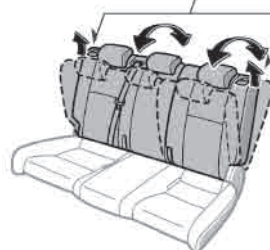

\* Pull the lever up to adjust seatback angle, or fold down


## Seats-Head restraints

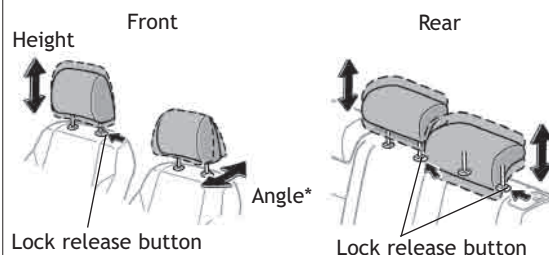

\* Driver side only (if equipped)

## FEATURES/OPERATIONS

### Tilt steering wheel

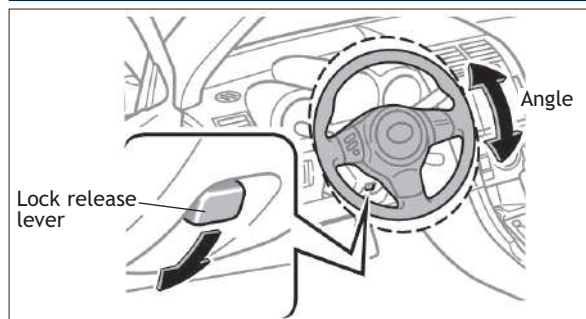


Hold wheel, push lever down, set angle then return lever.


**Note:** Do not attempt to adjust while the vehicle is in motion.

### Cruise control (if equipped)

#### Turning system ON/OFF

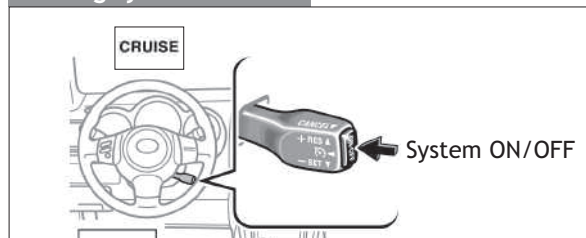

#### Functions

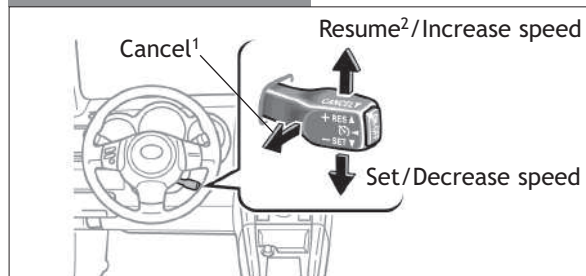


<sup>1</sup> The set speed may also be cancelled by depressing the brake pedal or pushing ON/OFF.

<sup>2</sup> If vehicle speed falls below 25 mph, the set speed will not resume.


### Lights & turn signals

#### Headlights

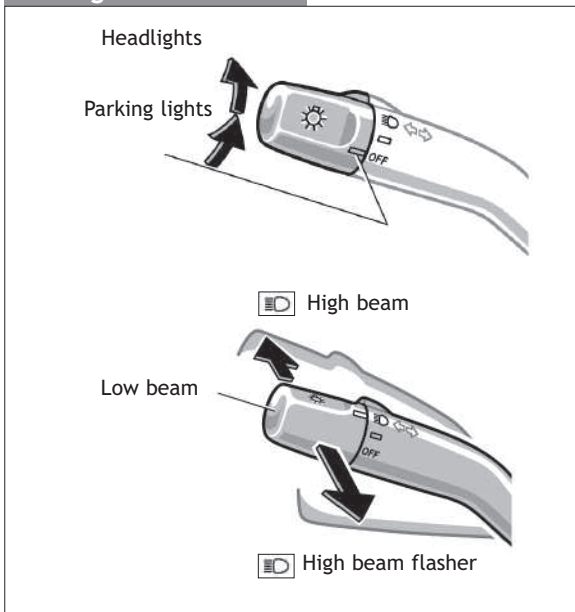

**Automatic light cutoff system** Automatically turns lights off when driver's door is opened with the engine off.


#### Turn signals

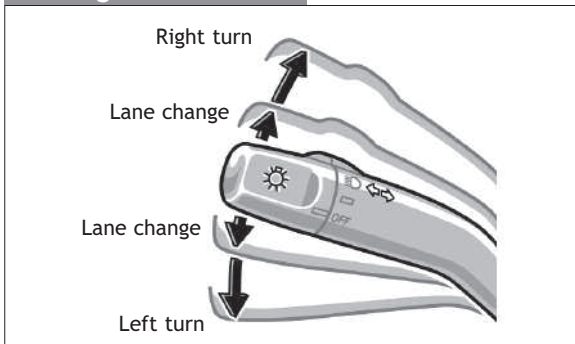




## FEATURES/OPERATIONS

### Windshield wiper & washer

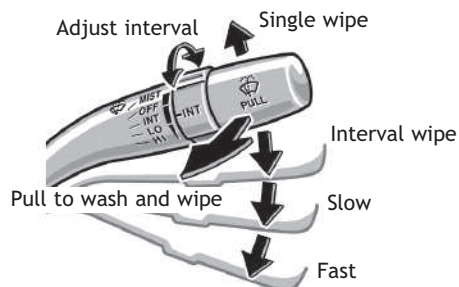


### Panorama moonroof (if equipped)

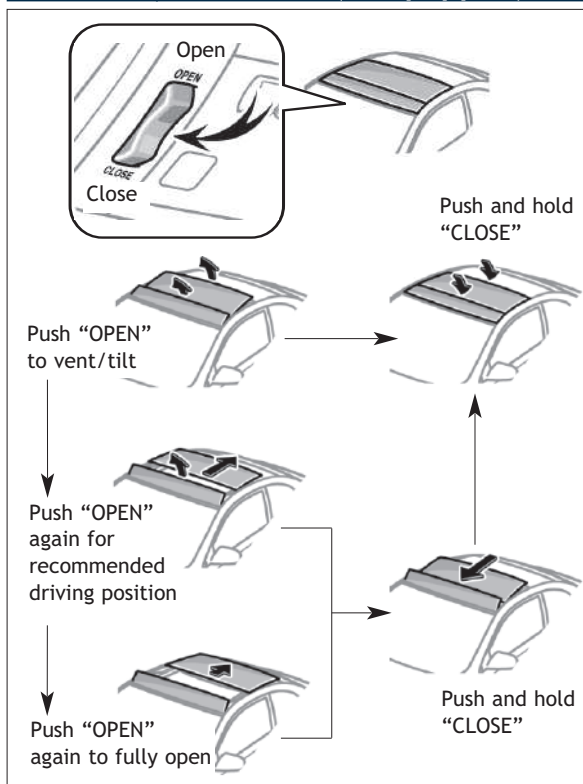

**NOTE:** If battery is disconnected, the moonroof needs to be reinitialized. Refer to the *Owner's Manual* for more details.

### Windows

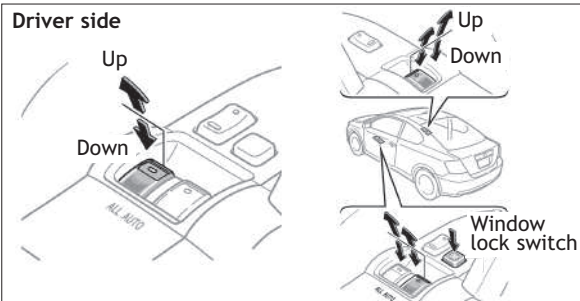

#### Window operation

**Automatic operation** Push the switch completely down or pull\* it completely up and release to fully open or close. To stop window mid-way, lightly push the switch in the opposite direction.


**Window lock switch** Deactivates all passenger windows. Driver's window remains operable.

**NOTE:** If battery is disconnected, the windows need to be reinitialized. Refer to the *Owner's Manual* for more details.

\* If equipped with auto close


### Light control-Instrument panel

Brightness control

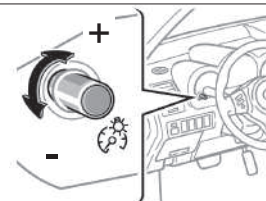

**NOTE:** This is also the trip meter reset button.


### Power outlet (if equipped)

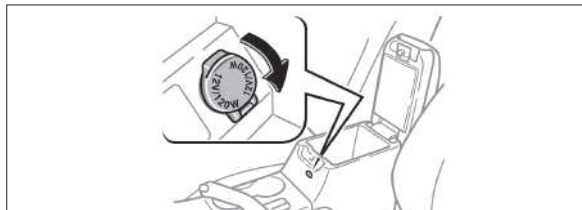

Designed for car accessories. Key must be in the "ACC" or "ON" position to be used.


## FEATURES/OPERATIONS

### Air Conditioning/Heating

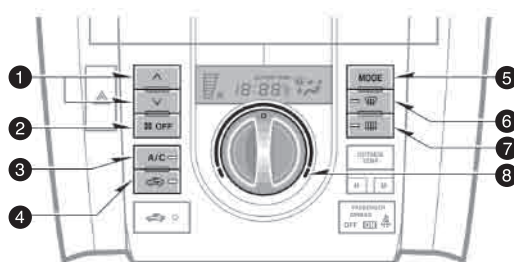


- 1 Fan speed
- 2 Air Conditioning/Heating system OFF
- 3 Air Conditioning ON/OFF
- 4 Fresh or recirculate cabin air
- 5 Vent selector  
In “” mode, use fresh air (“” indicator light “OFF”) to reduce window fogging.
- 6 Windshield air flow
- 7 Rear defogger
- 8 Temperature

### Clock

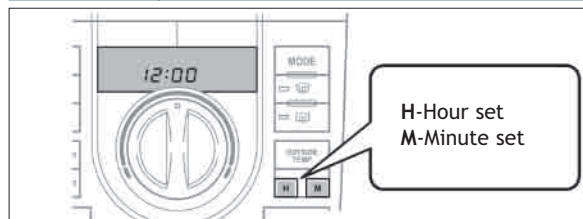


### Cup holders


#### Front

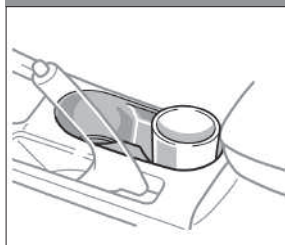

#### Rear

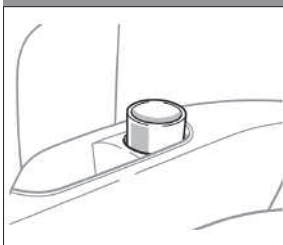

### Steering wheel switches (if equipped)

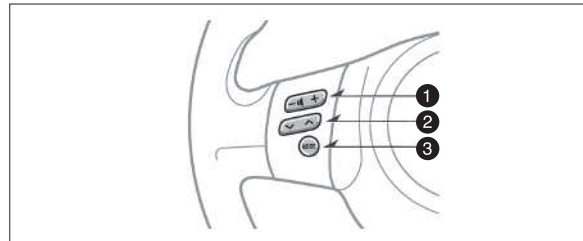

- 1 “- +”  
Volume control
- 2 “V ^”  
-In **radio mode** Push to select a preset station, push and hold to seek the next strong station.  
-In **tape mode** Push to skip up or down to a next/previous track, push and hold to fast forward or reverse.  
-In **CD mode** Push to skip up or down to a next/previous track.
- 3 “MODE”  
Push to turn audio “ON” and select an audio mode. Push and hold to turn the audio system “OFF.”

Refer to the *SCION Audio System Owner's Manual* for more details.


### AUX audio jack



Refer to the *SCION Audio System Owner's Manual* for more details.

## SAFETY AND EMERGENCY FEATURES


### Seat belts

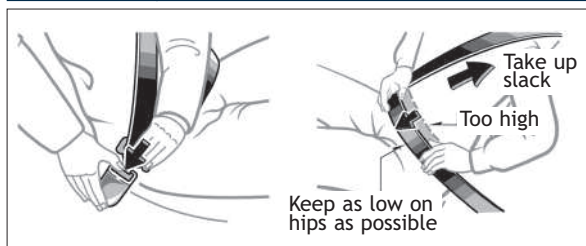


If belt is fully extended, then retracted even slightly, it cannot be re-extended beyond that point, unless fully retracted again. This feature is used to help hold child restraint systems securely.

To find more information about seat belts, and how to install a child restraint system, refer to the *Owner's Manual*.


### Tire Pressure Warning System reset

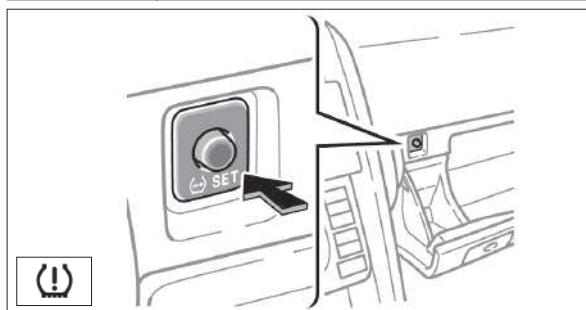


Designed to provide warning when tire pressure of any one of the tires is critically low while the vehicle is moving. It must be re-initialized by pushing and holding the “ SET” button if indicator light remains ON or blinks, and/or after replacing or rotating tires or wheels.

## Spare tire & tools

### Tool location

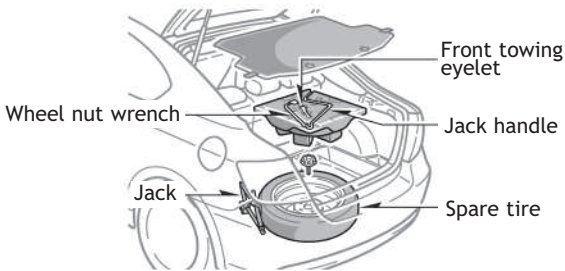

### Removing the spare tire

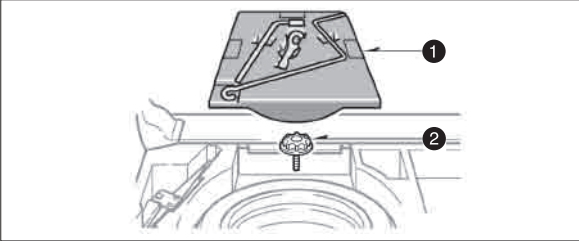

- 1 Remove the spare tire cover.
- 2 Loosen and remove the bolt.

Refer to the *Owner's Manual* for jack positioning and tire changing procedures.